

The Heritor *Hannibal* Automatic Timepiece

(HR4101-HR4106 series watches)

Mechanical automatic watches harness the kinetic energy contained within the natural movement of your arm to generate the force required to operate. The watch will commence operation after a sufficient volume of initial power has been generated by handling / wearing or by manually winding the crown. Supplemental winding through wear or manual winding will ensure sustained functionality and increase the duration in which the watch will continue to operate when unworn.



Setting Instructions:

- 1) Pull the crown out one click.
- 2) Rotate the crown counterclockwise until the date indicator changes.¹
- 3) Set the current time by rotating the crown counterclockwise;
 - for AM hours **do not** advance the hour hand past the 12 o'clock position,
 - for PM hours advance the hour hand past the 12 o'clock position **once**.
- 4) Push the crown in one click.
- 5) Manually wind the movement by rotating the crown clockwise 10-20 times.²
- 6) Set the current day of the week by pressing Button A until the correct value is displayed.
- 7) Set the current date by pressing Button B until the correct value is displayed.

Water Resistance Guidelines		
Rating	Submersible	Capacity of Resistance
No Marking	No	Splash/light contact only.
5ATM	No	Hand/dish washing.
10ATM	Yes	Low depth and short duration only.
20ATM	Yes	Short duration diving up to 5 meters.
25ATM+	Yes	Average depth and duration diving.

¹Setting the time to AM / PM accordingly ensures that the date indicators change at midnight rather than noon. If the date indicators are changing in the afternoon advance the hour hand one full rotation (12 hours), then reset date indicators as necessary.

²Although manual winding is not necessary, generating an initial power reserve and occasionally winding the movement manually will increase the duration in which the movement continues to operate when the watch is not worn.