

The Mechanical Automatic Watch

When worn, automatic watches harness the kinetic energy contained within the natural movement of your arm to generate the power required to function.

Power generated via automatic winding or supplemental manual winding is stored in the movement's mainspring and ensures a constant source of energy. This allows for continual operation when worn, and a period of operation when unworn.

The timepiece does not require electro-chemical power sources, does not require daily setting, and is an exquisite definition of efficiency.

Water Resistance Guidelines

Rating	Submersible	Capacity of Resistance
No Marking	No	Light contact only
5ATM	No	Splash resistant
10ATM	Yes	Low depth and duration snorkeling
20ATM or greater	Yes	Deep sea diving

Note: Use of the crown while the watch is in contact with water will negate the rated water resistance as water penetration may occur. Additionally, Empress watches are not rated for use in ultrasonic cleaners.


For general inquiries or model specific instructions, please email us at: cs@empresswatches.com

For additional information, please visit:
empresswatches.com



Setting Instructions

Non-Calendar Watches

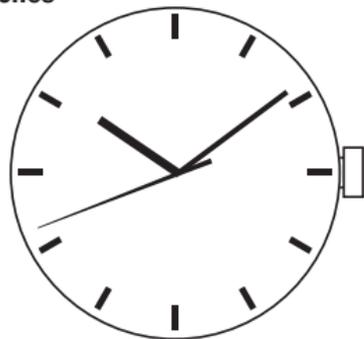

1. Pull the crown out one click then rotate the crown until the current time is displayed.
2. Push the crown in one click then rotate the crown clockwise 10-20 times to manually wind the mainspring.

Setting Instructions

Calendar Watches



1. Pull the crown out two clicks then rotate the crown until the current time is displayed.
2. Push the crown in one click then rotate the crown until the current date is displayed.
3. Push the crown in one click then rotate the crown clockwise 10-20 times to manually wind the mainspring.

Note: If the calendar is out of sync advance the hour hand 12 hours, then adjust the calendar as necessary.

Care

Case/Bracelet

Soiled areas may be gently cleaned with a lightly dampened soft cloth, then buffed with a polishing cloth.

Straps

If the strap becomes wet, dry off excess water to avoid potential discoloration or premature deterioration.

Note: Cosmetic damages due to wear and/or abuse are not covered under warranty. As such, it is recommended to use delicacy while cleaning and to avoid environments or chemicals that may accelerate wear.