

# The Breed Nash Timepiece

(BRD5401-BRD5405)



## Setting Instructions

- 1) Pull outwards on the lower edge of the crown protector to free it from its latching mechanism.
- 2) Unscrew the crown by rotating it counterclockwise until it is free from the case threads.
- 3) Pull the crown out two clicks.
- 4) Set the current time by rotating the crown clockwise. \*
  - Reference the 24-hour sub dial to ensure am/pm hours are set accordingly (0-12=am, 12-24=pm).
- 5) Push the crown in one click.
- 6) Set the current date by rotating the crown clockwise until the correct value is displayed.
- 7) Push the crown in one click to commence timekeeping.
- 8) Push in on the crown then screw it down clockwise until it is fully seated. ***finger-tighten only***
- 9) Reposition and secure the crown protector.

## Tachymeter Functions

### Start / Stop / Reset

- 1) Press Button A to start the timer, press again to stop.
- 2) Press Button B to reset the timer / hands.

### Lap Tracking

- 1) Press Button A to start the timer.
- 2) Press Button B to pause the hands of the timers (tachymeter will continue running).
- 3) Press Button B to resume (timer hands will advance to current time).
- 4) To stop the timer press Button A (tachymeter and timer hands will stop), press again to resume.
- 5) To reset the timer press Button A to stop, then press Button B to reset.

## Water Resistance Guidelines

**Note:** the crown must be properly secured to the case to achieve the rated water resistance. Additionally, manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance as water penetration may occur.

Water Resistance Guidelines		
Rating	Submersible	Capacity of Resistance
No Marking	No	Splash/light contact only.
5ATM	No	Hand/dish washing.
10ATM	Yes	Low depth and short duration only.
20ATM	Yes	Short duration diving up to 5 meters.

\* Setting the time to AM / PM accordingly ensures that the date indicator changes at midnight rather than noon. If the date indicator is changing in the afternoon advance the hour hand one full rotation (12 hours), then reset the date indicator as necessary.