

The Reign *Rothschild* Timepiece

(RN1301 – RN1307)

Mechanical automatic watches harness the kinetic energy contained within the natural movement of your arm to generate the force required to operate. The watch will commence operation after a sufficient volume of initial power has been generated by handling / wearing or by manually winding the crown. Supplemental winding through wear or manual winding will ensure sustained functionality and increase the duration in which the watch will continue to operate when unworn.



Setting Instructions

- 1) Unscrew the crown by rotating it counterclockwise until it releases from the case threads.
- 2) Pull the crown out one click to its most outward position.
- 3) Set the movement to AM hours by rotating the crown counterclockwise until the date indicator advances one increment. Continue rotating the crown counterclockwise to set the current time;
 - for AM hours advance the hands directly to the current time,
 - for PM hours advance the hour hand one full rotation (12 hours) once prior to setting the time.
- 4) Push the crown in to its rest / manual winding position.
- 5) Manually wind the mainspring by rotating the crown clockwise 10 – 20 times.
- 6) Push in on the crown then screw it down clockwise until it is secured to the case. ***finger-tighten only***
- 7) To set the current day of the week press Button A until the correct value is displayed.
- 8) To set the current date press Button A until the correct value is displayed.

Note: Setting the time to AM / PM accordingly ensures that the date indicators change at midnight rather than noon. If the date indicators are changing in the afternoon advance the hour hand one full rotation (12 hours), then reset the date indicators as necessary - a small pointed object may be used to actuate the recessed buttons.

Water Resistance Guidelines

Note: The screw down crown must be properly secured to the case to achieve the rated water resistance. Additionally, manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance as water penetration may occur.

| Rating | Submersible | Capacity of Resistance |
|------------|-------------|---------------------------------------|
| No Marking | No | Splash/light contact only. |
| 5ATM | No | Hand/dish washing. |
| 10ATM | Yes | Low depth and short duration only. |
| 20ATM | Yes | Short duration diving up to 5 meters. |