

The Breed *Titan* Timepiece

(BRD3701 – BRD3706)



Setting Instructions

- 1) Pull the three position crown out two clicks to its outermost position.
- 2) Set the current time by rotating the crown clockwise.
 - Reference the 24 hour sub dial to ensure AM/PM hours are observed accordingly (0-12=AM/12-24=PM).
- 3) Push the crown in one click to its middle position.
- 4) Set the current date by rotating the crown clockwise until the correct value is displayed.
- 5) Push the crown in one click to its rest position to commence timekeeping.

Note: Setting the time to AM / PM accordingly ensures that the date indicator changes at midnight rather than noon. If the date indicator is changing in the afternoon advance the hour hand one full rotation (12 hours), then reset the date indicator as necessary.

Tachymeter Functions

Start / Stop / Reset

- 1) Press Button A to start the timer, press again to stop.
- 2) Press Button B to reset the timer / hands.

Lap Tracking

- 1) Press Button A to start the timer.
- 2) Press Button B to pause the hands of the timers (timer will continue running).
- 3) Press Button B to resume (timer hands will advance to current time).
- 4) To stop the timer press Button A (timer / timer hands will stop), press again to resume.
- 5) To reset the timer / hands press Button A to stop, then press Button B to reset.

Sub Dial Hand Alignment

- 1) Pull the three position crown out two clicks to its outermost position.
- 2) To move the sub dial hands clockwise, press Button A once to move the hands one increment, press and hold to advance the hands at an accelerated rate.
- 3) To move the sub dial hands counterclockwise, press Button B once to move the hands one increment, press and hold to advance the hands at an accelerated rate.
- 4) Once the sub dials hands are set to the desired location, push the crown back in to its rest position to commence timekeeping.

Water Resistance Guidelines

5 ATM – Splash and short duration resistance only. Not suitable for swimming or bathing. Not suitable for diving.

Note: Manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance as water penetration may occur.