

The Earth *Inyo* Timepiece

(EW3201 – EW3204)



Setting Instructions

- 1) Pull the crown out two clicks to its most outward position.
- 2) Set the movement to AM hours by rotating the crown counterclockwise (hands move clockwise) until the date indicator advances one increment. Continue rotating the crown counterclockwise to set the current time;
 - for AM hours advance the hands directly to the current time,
 - for PM hours advance the hour hand one full rotation (12 hours) once prior to setting the time.
- 3) Push the crown in one click to its middle position.
- 4) Set the current date by rotating the crown clockwise until the correct value is displayed.
- 5) Push the crown in one click to its rest position to commence timekeeping.

Note: Setting the time to AM / PM accordingly ensures the date indicator changes at midnight rather than noon. If the date indicator is changing in the afternoon, advance the hour hand one full rotation (12 hours), set the minute hand to the current minute in the hour, then reset the date indicator as necessary.

Water Resistance Guidelines

OATM - Splash / light contact only, do not submerge. Not suitable for bathing, swimming, or diving.

Note: Manipulation of the crown while the watch is in contact with water will negate the rated water resistance as water penetration may occur.