

# The Heritor *Edmond* Timepiece

(HR6201 – HR6205)

Mechanical automatic watches harness the kinetic energy contained within the natural movement of your arm to generate the force required to operate. The watch will commence operation after a sufficient volume of initial power has been generated by handling / wearing or by manually winding the crown. Supplemental winding through wear or manual winding will ensure sustained functionality and increase the duration in which the watch will continue to operate when unworn.



## Setting Instructions

- 1) Pull the crown out one click to the time setting position.
- 2) Rotate the crown counterclockwise until the date indicator advances one position.
- 3) Set the current time as follows:
  - for AM hours advance the hands directly to the current time,
  - for PM hours advance the hour hand one full rotation (12 hours) *once*, prior to setting the time.
- 4) Push the crown back in one click to its rest position.
- 5) Manually wind the mainspring by rotating the crown clockwise 10-20 times.
- 6) Set the current day of the week by pressing Button A until the correct value is displayed.
- 7) Set the current date by pressing Button B until the correct value is displayed.
- 8) Set the current month by pushing Button C until the correct value is displayed.

**Note:** Setting the time to AM / PM accordingly ensures that the date indicators change at midnight rather than noon. If the date indicators are changing in the afternoon, advance the hour hand one full rotation (12 hours), then adjust the date indicators as necessary.

## Water Resistance Guidelines

**5 ATM** – light contact and short duration resistance only. Not suitable for bathing, swimming, diving, or extended periods of contact. **Note:** manipulation of the crown while the watch is in contact with water will negate the rated water resistance as water penetration may occur.