The Reign Cascade Timepiece

(RN4401 - RN4406)

Mechanical automatic watches harness the kinetic energy contained within the natural movement of your arm to generate the force required to operate. The watch will commence operation after a sufficient volume of initial power has been generated by handling / wearing or by manually winding the crown. Supplemental winding through wear or manual winding will ensure sustained functionality and increase the duration in which the watch will continue to operate when unworn.



Setting Instructions

- 1) Pull the crown out two clicks to the outermost position.
- 2) Set the current time by rotating the crown clockwise.
 - Reference the 24-hour sub dial to ensure AM/PM hours are set accordingly (0-12=AM, 12-24=PM).
- 3) Push the crown in one click to its middle position.
- 4) Set the current date by rotating the crown clockwise.
- 5) Set the current day of the week by rotating the crown counterclockwise.
- 6) Push the crown in one click to commence timekeeping.
- 7) Manually wind the movement by rotating the crown clockwise 10-15 times.
- 8) Set the current month by pressing the recessed button above the crown (using a small pointed object), until the correct value is displayed.

Note: Setting the time to AM / PM accordingly ensures that the date indicators change at midnight rather than noon. If the date indicators are changing in the afternoon, advance the hour hand one full rotation (12 hours), then reset the date indicators as necessary.

Water Resistance Guidelines

5 ATM – Suitable for low depth and short duration water contact only, not suitable for bathing, swimming, or diving. **Note:** manipulation of the crown or button while in contact with water will negate the rated water resistance as water penetration may occur.