


The Shield *Haig* Timepiece

(SH0501 – SH0508)

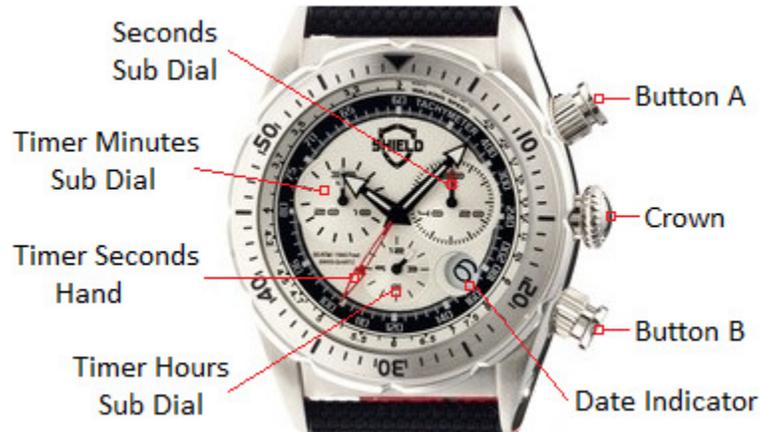

Setting Instructions


- 1) Unscrew the crown by rotating it counterclockwise until it is free from the case threads.
- 2) Pull the crown out two clicks to its outermost position.
- 3) Rotate the crown clockwise until the date indicator advances one position.
- 4) Set the current time as follows:
 - for AM hours advance the hands directly to the current time,
 - for PM hours advance the hour hand one full rotation (12 hours) *once*, prior to setting the time.
- 5) Push the crown in one click to its middle position.
- 6) Set the current date by rotating the crown clockwise until the correct value is displayed.
- 7) Push the crown in to its innermost rest position to commence timekeeping.
- 8) Secure the crown to the case by pressing in on the crown and carefully starting the threads by rotating the crown clockwise. Screw the crown down until it is fully seated – *finger tighten only*.

Note: Setting the time to AM / PM accordingly ensures that the date indicator changes at midnight rather than noon. If the date indicator is changing in the afternoon advance the hour hand one full rotation (12 hours), then adjust the date indicator as necessary.

Tachymeter Buttons

The tachymeter buttons feature threaded collars that lock the buttons in place to prevent incidental activation, and to provide additional resistance to water penetration. To use the buttons they must be unlocked first.

- 1) To unlock the buttons, unscrew the collar by rotating it counterclockwise until it is flush with the underside of the button.
- 2) To lock the buttons, screw the collar down by rotating it clockwise until it is secured to the case.

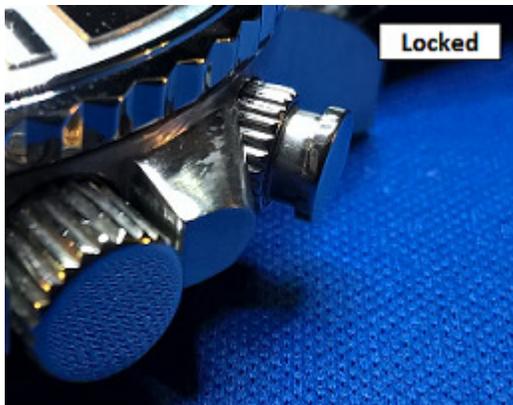

Tachymeter Functions

Start / Stop / Reset

- 1) Press Button A to start the timer, press again to stop.
- 2) Press Button B to reset the timer / hands.

Lap Tracking

- 1) Press Button A to start the timer.
- 2) Press Button B to pause the hands of the timer (timer will continue running).
- 3) Press Button B to resume (timer hands will advance to current time).
- 4) To stop the timer press Button A (timer and timer hands will stop), press again to resume.
- 5) To reset the timer press Button A to stop, then press Button B to reset.

Resetting the Chronograph

The timer hands are adjustable and may be set to start in any desired location. **Please note:** during the resetting procedure pressing Button A will advance the selected hand one increment, pressing and holding Button A will cause the hand to sweep at an accelerated rate.

- 1) Unlock both buttons and the crown.
- 2) Pull the crown out two clicks to its outermost position.
- 3) Press and hold Button A and Button B simultaneously until the timer seconds hand makes one full rotation.
(if the hand does not move push the crown back in, pull it back out, and then try again)
- 4) Press Button A to advance the timer seconds hand to the desired location.
- 5) Press Button B to select the timer *hours* sub dial.
- 6) Press Button A to advance the hand to the desired location.
- 7) Press Button B to select the time *minutes* sub dial.
- 8) Press Button A to advance the hand to the desired location.
- 9) If no further adjustment is required return the crown to the innermost position to commence timekeeping.
- 10) If further adjustment is required press Button B to select the timer seconds hand again, then repeat the setting process starting at step 4.
- 11) Secure both buttons and the crown back to the case.

Water Resistance Guidelines

50 ATM – Approved for bathing, swimming, and diving. **Note:** the crown and buttons must be properly secured to the case to achieve the rated water resistance. Additionally, manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance as water penetration may occur.